



'Waste Cont full' displayed on the LCD is **NOT** a malfunction or error. It is simply the machine saying it needs to be emptied and reset.

To resume normal machine operation:

1. Open the machine, insert the yellow service key.
2. Wait for the display to read 'Ready for use'.
3. Remove both the front drip tray and rear waste container.
4. Empty and clean both.
5. **DO NOT** replace immediately. Wait until LCD display reads 'Insert tray'.
6. Once the message appears, insert rear waste container and front drip tray
7. Remove yellow key, close and lock the door.

The machine is now be reset and will vend 50 pods. Then the message will reappear and this procedure will need to be followed once again.