




Dose adjustment

Adjusting dose sizes on your LB2301 is a simple procedure. Throughout the programming procedure, refer to this diagram for button identification:

LB2301 - Single cup program button layout

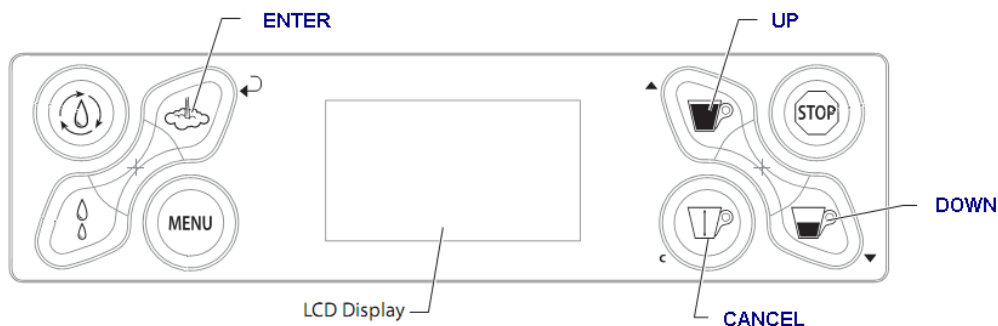

1. To enter program menu, switch the machine off using the rear switch then back on. When the LCD shows a timer symbol, press and hold the ENTER key.
2. Release ENTER when the display shows 1: Program Menu.
3. Press ENTER 6 times, the LCD should display 1.1 Identification.
4. Press UP once to show 1.2 Setup then ENTER to show 1.2.1 Temperature.
5. Press UP and ENTER to display 1.2.2.1 Short product dose.
6. At this point, UP and DOWN can be used to scroll between the 3 doses: small, long, free. Each can be adjusted as required.
7. Press ENTER, a small cursor will appear under the first digit. Press UP and DOWN to adjust the number as desired. Then ENTER to move across the digits. When the dose number is as required, ensure to press ENTER so the cursor disappears. Only then will the new value be stored.
8. Switch the machine off and on and await Ready for use message.
9. Enjoy your new dose size!

Note 1 - Standard Bluepod doses are short: 155, long: 265 and free: 615

Note 2 - If dose size entered is too large/too small, it will be rejected.