




Dose adjustment

Adjusting dose sizes on your LB2200 is a simple procedure. Throughout the programming procedure, refer to this diagram for button identification:

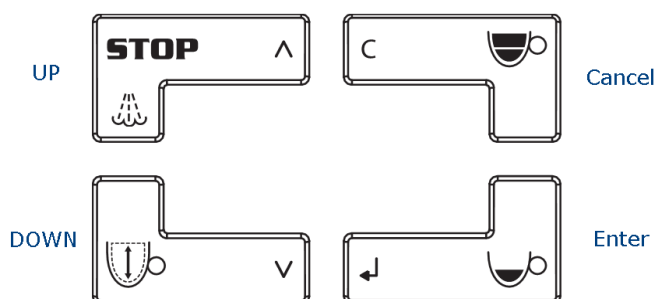

1. To enter program menu, switch the machine off using the rear switch. Press and hold CANCEL then while still holding CANCEL, simultaneously turn the machine back on.
2. Release CANCEL when the display shows 1: Identification.
3. Press in succession this sequence: UP, ENTER, UP, ENTER
4. 'Dose water short' will now be displayed.
5. You now can select to adjust either short or long dose size by scrolling between the two with the UP button. Press ENTER on desired dose.
6. A small cursor symbol appears under the first digit
7. Press UP and DOWN to adjust the number as desired. Press ENTER to move across the digits. When the dose number is as required, ensure to press ENTER until the cursor disappears. Only then will the new value be stored.
8. Switch the machine off and on and await Ready for use message
9. Enjoy your new dose sizes!

Note 1 - Standard Bluepod doses are Dose water short: 170 and Dose water long: 280

Note 2 - If dose size entered is too large/too small, it will be rejected.